

# PLUGS



Automotive Components since 1963

1		R 15, Ignition S B+, Sense L Warning light	200	33		FR Field, output for computer IG 15, Ignition L Warning light	292	65		C Input from computer (reduces charging) F Field, Output for computer IG 15, Ignition L Warning light	97		COM Communication w/ computer	129		COM Communication w/ computer		
2		E B-, Ground F Field N Stator, W A B+, Battery	130	34		N Stator, W E B-, Ground B+ B+, Battery F Field		66		S B+, Sense L Warning light FR Field, Output for computer	98		LI Field, Output for computer RC Signal from computer A B+, Sense	337	130		B+ B+, Battery D+ Warning light DFM Field, output for computer	
3		L Warning light IG 15, Ignition	251	35		R Stator, Phase, W F Field	153	67		L Warning light IG 15, Ignition M Field, Output for computer	321	99		R 15, Ignition L Warning light	131		COM Communication w/ computer	
4		L Warning light S B+, Sense	220	36		L Warning light IG 15, Ignition S B+, Sense	290	68		G Input from computer (reduces charging) S B+, Sense L Warning light F Field, Output for computer	307	100		L Warning light	300	132		COM Communication w/ computer
5		L Warning light R 15, Ignition S B+, Sense	221	37		N Stator, W E B-, Ground F Field	240	69		L Warning light IG 15, Ignition F Field, Output for computer	316	101		S B+, Sense C Input from computer L Warning light IG 15, Ignition	352	133		L Warning light FR Field, output for computer
6		N Stator, W F Field	190	38		F Field E B-, Ground P Stator, Phase, W	241	70		B+ B+, Battery D+ Warning light W Stator	362	102		F1 Field (Brush 1) F2 Field (Brush 2)	362	134		
7		L Warning light S B+, Sense	300	39		S B+, Sense L Warning light	306	71		B+ B+, Battery D+ Warning light DF Field, Output for computer	364	103		L Warning light DFM Field, Output for computer	364	135		F1 Field (Brush 1) F2 Field (Brush 2)
8		S B+, Sense L Warning light	191	40		C Input from computer (reduces charging) IG 15, Ignition L Warning light	284	72		L Warning light DF/DFM Field, output for computer	365	104		L Warning light DFM Field, Output for computer	365	136		LI Field, Output for computer RC Signal from computer BVS
9		R 15, Ignition L Warning light	192	41		L Warning light IG 15, Ignition	312	73		S B+, Sense L Warning light	360	105		B+ B+, Battery D+ Warning light PHIN Input from computer	360	137		COM Communication w/ computer
10		IG 15, Ignition L Warning light	193	42		L Warning light IG 15, Ignition S B+, Sense	312	74		L Warning light IG 15, Ignition FR Field, output for computer	321	106		B+ B+, Battery D+ Warning light	321	138		S B+, Sense L Warning light
11		IG 15, Ignition L Warning light	282	43		S B+, Sense IG 15, Ignition	151	75		DFM Field, output for computer L Warning light	337	107		LI Field, Output for computer RC Signal from computer S B+, Sense	337	139		P Stator, Phase, W D B+, Sense
12		S B+, Sense IG 15, Ignition L Warning light	280	44		P Stator, Phase, W L Warning light F Field, output for computer S B+, Sense	309	76		F Field, output for computer L Warning light	309	108		L Warning light DFM Field, Output for computer	309	140		D+ Warning Light W Stator
13		C Input from computer (reduces charging) FR Field, output for computer IG 15, Ignition L Warning light	294	45		DF Field, output for computer D+ Diode, Warning light	330	77		L Warning light IG/R 15, Ignition	330	109		L Warning light DFM Field, Output for computer	330	141		15 Ignition 61E Warning light W Stator
14		S B+, Sense FR Field, output for computer IG 15, Ignition L Warning light	290	46		F Field, output for computer L Warning light	332	78		S B+, Sense DFM-M Field, output for computer IG 15, Ignition L Warning light	295	110		15 W Stator S B+, Sense L Warning light	295	142		F Field B+ B+, Battery N Stator, W
15		E B-, Ground N Field F Stator, W	140	47		S B+, Sense IG 15, Ignition L Warning light	140	79		L Warning light	140	111		S B+, Sense L Warning light	140	143		S B+, Sense I 15, Ignition L Warning light P Stator, Phase, W
16		F Field E B-, Ground N Stator, W	230	48		L Warning light DF Field, output for computer	918	80		Deleted Replaced with PL78	918	112		L Warning light DFM Field, Output for computer	918	144		S B+, Sense L Warning light
17		E B-, Ground F Field P Stator, W	140	49		A B+, Sense S Stator, Phase, W (Connect to small separate stator terminal on alternator) I 15 / Warning light	330	81		L Warning light DFM Field, Output for computer S B+, Sense	330	113		15 Ignition 61E/L Warning light	330	145		I 15, Ignition S B+, Sense
18		F Field E B-, Ground P Stator, W	241	50		W Stator L Warning light	902	82		W Stator L Warning light 15 15, Ignition S B+, Sense DFM Field, Output for computer	923	114		COM Communication w/ computer DFM Field, Output for computer	923	146		RLO 15, Ignition IG 15, Ignition DFM-M Field, Output for computer L Warning light
19		L Warning light S B+, Sense IG 15, Ignition	242	51		I 15 / Warning light S Stator, Phase, W (Connect to small separate stator terminal on alternator) A B+, Sense	332	83		L Warning light I 15, Ignition	310	115		L Warning light FR Field, Output for computer	310	147		L Warning light DFM Field, Output for computer
20		L Warning light S B+, Sense IG 15, Ignition	261	52		15 Ignition 61E Warning light	271	84		DF Field	271	116		I Warning light FR Field, Output for computer A B+, Sense	271	148		W Stator L Warning light
21		F Field N Stator, W B B+, Battery	310	53		S B+, Sense L 15, Ignition P Warning light Stator, Phase, W	310	85		L Warning light S B+, Sense	319	117		I 15 / Warning light D Dummy A B+, Sense	319	149		L Warning light
22		D+ Warning light B+ B+, Battery	110	54		P Stator, Phase, W D Driver, Control from computer	303	86		COM Communication w/ computer	303	118		P W, Stator L Warning light I 15, Ignition S B+, Sense	303	150		LIN
23		W Stator D+ Warning light	631	55		L Warning light	365	87		L Warning light	364	119		P W, Stator L Warning light F Field, Output for computer S B+, Sense	364			
24		P Stator, Phase, W L Warning light I 15, Ignition S B+, Sense	310	56		L Warning light W Stator	361	88		D- B-, Ground DF Field D+ Diode, Warning light	102	120		A B+, Sense D Dummy I 15 / Warning light	102			
25		D+ Warning light DF Field D- B-, Ground	101	57		FR-LI Field, output for computer SIG-RC Signal, Control from computer A-A B+, Sense	337	89		L Warning light R 15, Ignition	337	121		W Stator L Warning light	337			
26		L Warning light	272	58		L Warning light IG 15, Ignition	318	90		15 Ignition L Warning light	318	122		S B+, Sense I 15, Ignition L Warning light P W, Stator	318			
27		L Warning light + 15, Ignition	270	59		N Stator, W E B-, Ground IG 15, Ignition DF Field	296	91		L Warning light DFM Field, Output for computer	364	123		L Warning light	364			
28		D- B-, Ground DF Field D+ Diode, Warning light	100	60		IG 15, Ignition L Warning light C Input from computer (reduces charging) FR Field, Output for computer	296	92		FR Field, Output for computer L Warning light S B+, Sense IG 15, Ignition	295	124		COM Communication w/ computer	295			
29		D+ Warning light B+ B+, Battery	110	61		L Warning light DFM Field, Output for computer	364	93		F1 Field (Brush 1) F2 Field (Brush 2)	285	125		COM Communication w/ computer	285			
30		IG 15, Ignition N Stator, W L Warning light S B+, Sense	350	62		L Warning light I 15, Ignition S B+, Sense	260	94		L Warning light E B-, Ground F Field	260	126		L Warning light	260			
31		W Stator D+ Warning light B+ B+, Battery	250	63		L Warning light	250	95		L Warning light IG 15, Ignition C Input from computer	317	127		F Field L Warning light	317			
32		R 15, Taendingsplus S B+, Sense L Ladelampe	250	64		FR Field, Output for computer L Warning light	292	96		F1 Field (Brush 1) F2 Field (Brush 2)	302	128		S/P IG 15, Ignition L Warning light	302			